

 
# MEGAPHONE

**Megaphone for handheld or shoulder-slung use (strap supplied).**

**Detachable anti-howl microphone on coiled lead with on-off switch and volume control. Metal and ABS construction.**

## Operating instructions

1. When carrying the megaphone on the shoulder, press the (1) press-to-talk power on-off switch, on the left side of the microphone.
2. When holding the megaphone at the grip, fix the microphone hanger inlet in the microphone fixing hanger, then press the (2) press-to-talk power on-off switch back with your index finger.
3. Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.
4. Turn the sound volume control, on the right hand side of the microphone and adjust the sound level to optimum without causing howling.

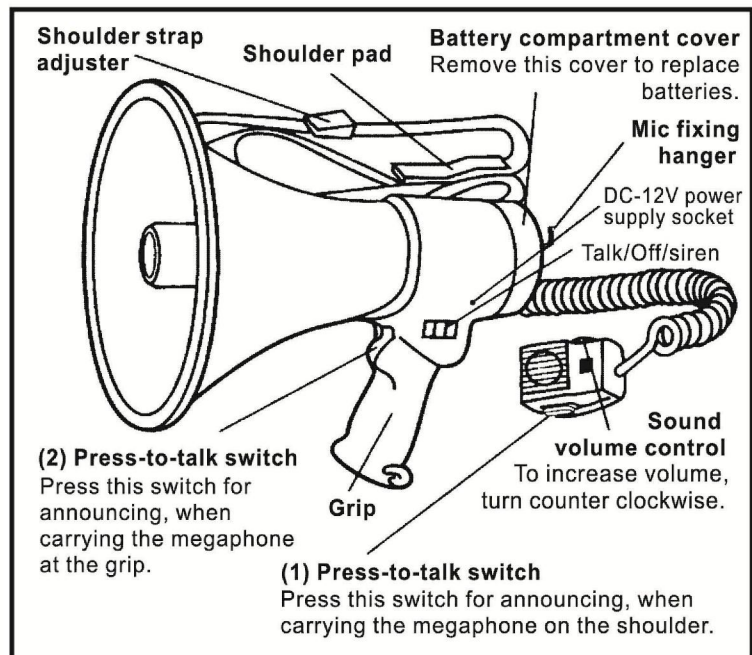

## Instruction of U Disk Function

 
Plug in the U disk, switch the LOCK button on the left side of microphone to the top. Now the U disk is well connected. And the megaphone will play the first piece of the music automatically, and you can choose the one you like and adjust the volume according the sketch.. When you stop using the disk, please switch the Lock button to the bottom, and then unplug it.

### Notice:

1. You can play the music on the disk and speak at the same time, they will not effect each other.
2. If you don't want to speak when you play the music, please turn off the volume control, thus it can turn down the noise and save the battery.
3. Please don't touch the U disk while the indicator light is flashing.
4. The capability of the U disk is no more than 6G, and it can only identify MP3 format.




The operation instruction of the panel

- ◀◀ Select the former piece of the music (Press shortly) decrease volume (Press long )
- ⏸ Pause /Play (Press shortly) Stop (Press long )
- ▶▶ Select the next piece of the music (press shortly) Increase volume (press long)

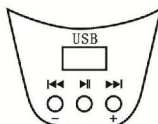

## TO replace batteries

   1. Loosen the locking screw of the battery compartment cover on the back of the body. The battery compartment cover comes off.
2. Insert 8 x type D (UM-1) batteries in the battery case observing correct polarity.
3. Insert the battery case with batteries into the battery compartment of the megaphone observing correct polarity.

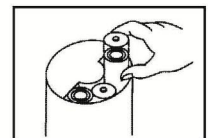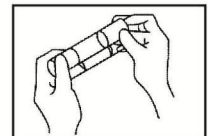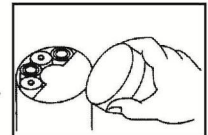

## Notes

- 1 Make sure the batteries are inserted correctly, observing correct polarity.
- 2 Remove the batteries when the megaphone is not in use for a long period of time.
- 3 Drained batteries do not give sufficient sound volume. Replace the batteries at regular intervals.

## Technical specifications

Range.....1200 Yard  
 Power..... 50Watts  
 Weight.....2.86 Lbs  
 Dims..... 9" (dia.) x 13 3/4" (len.)